


# INSTRUCTION MANUAL



DELTA 6000™


**PATENT PROTECTED TECHNOLOGY**

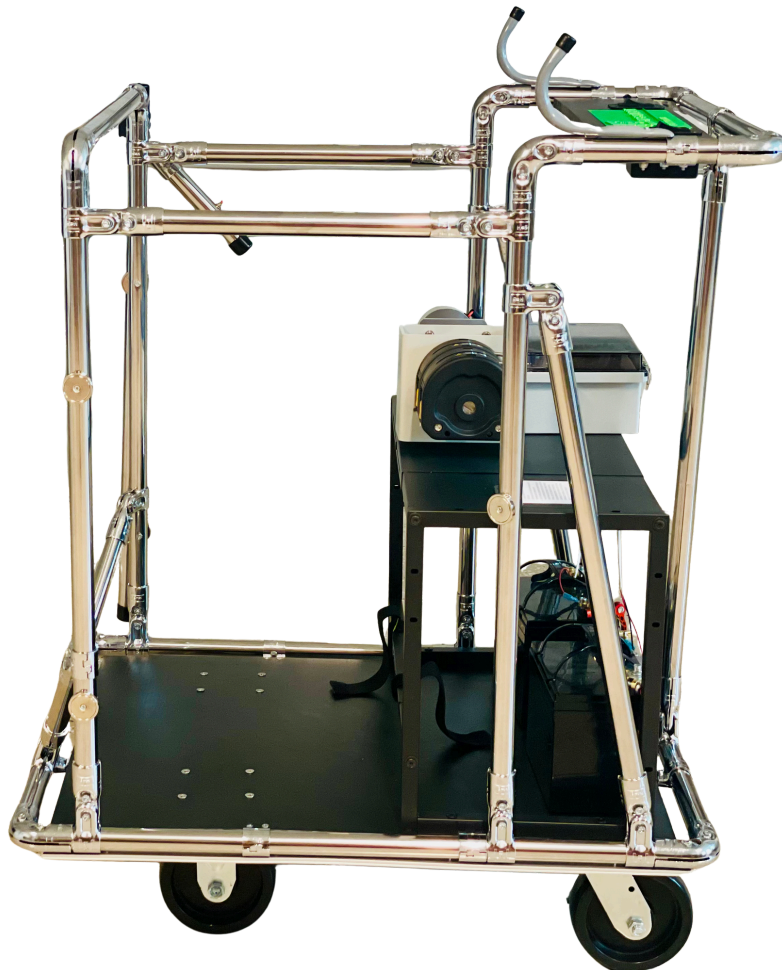

**CONTACT US**

**(800) 910-3120**

**ENDURABLEPRODUCTS.COM**

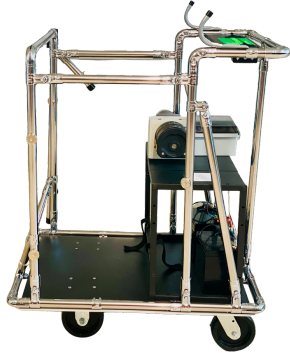

## CART

**\*REQUIRES TWO 12 VOLT BATTERIES**  
**BATTERIES ARE NOT INCLUDED**  
**AVAILABLE AT ANY AUTO PARTS STORE**



## WAND

**ATTACHES VERTICALLY TO THE**  
**MAGNETS ON THE CART**



## BAG 1

1. TWO BATTERY CHARGERS
2. VALVE HOLDER
3. DRIP CUP HOLDER
4. TWO CLAMPS
5. INSTRUCTIONAL MANUAL




## BAG 2

**ONE HOSE/VALVE ASSEMBLY**

## REPLACEMENT VALVE

NOT INCLUDED BUT AVAILABLE  
FOR PURCHASE

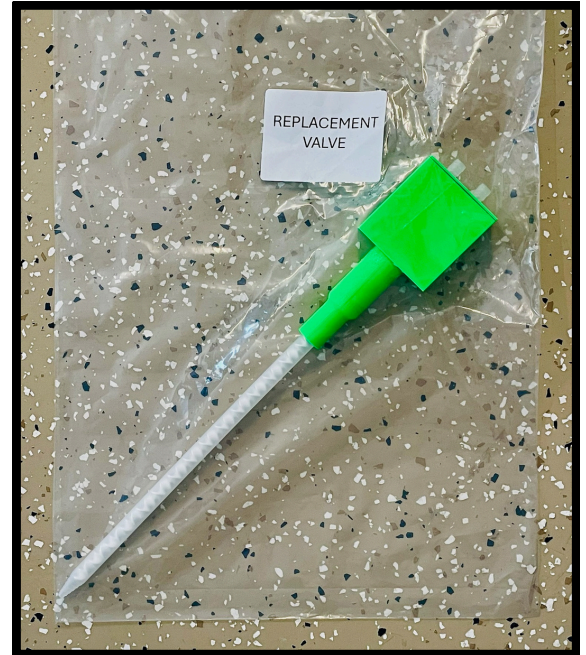

## HOSE/VALVE ASSEMBLY

ADDITIONAL HOSE/VALVE  
ASSEMBLY FOR PURCHASE



## **INSTRUCTIONAL VIDEO**

PLEASE WATCH THE INSTRUCTIONAL VIDEO  
ON THE ENDURABLEPRODUCTS.COM WEBSITE  
BEFORE USING THE DELTA 6000 MACHINE.

## **VERY IMPORTANT**

DO NOT LET THE MACHINE STOP FOR MORE  
THAN 30 SECONDS AT A TIME AFTER MATERIAL REACHES  
THE VALVE OR THE TIP WILL BECOME CONGEALED AND  
THE VALVE WILL NEED TO BE REPLACED.

## **SAFETY WARNING**






WEAR SAFETY GOGGLES WHEN USING THE MACHINE.  
TUBING IS UNDER PRESSURE WHEN PUMP IS IN USE.



# ENDURABLE DELTA 6000

## INSTRUCTIONS

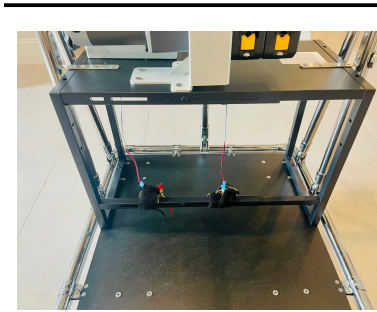PG. 1

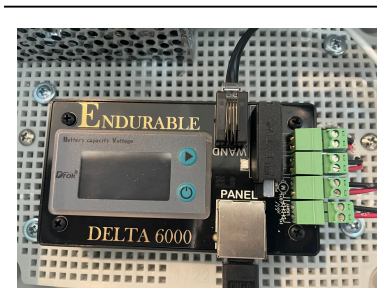	<p>Release the terminal wires from the Wrap-it strap. Keep the strap for use to hold the tubing against the wand. The battery terminal wires are fitted with quick-attach hardware to allow you to quickly hook up and start your project.</p>
	<p>Before using the machine, hook up to the batteries.</p>
	<p>Attach the wand cord to the wand.</p>
	<p>The circuit board is labeled for all cords and wires to attach properly. Please note there is a reset switch on the circuit board in case the circuit board is overloaded.</p>
	<p>The button on the left of the control panel is the main power switch. It turns on the lights and readies the cart to turn on the motor.</p>

# ENDURABLE DELTA 6000

## INSTRUCTIONS

PG. 2




The button on the right turns on the motor.




The wand attaches to the cart via the magnets. You may attach the wand to either of the front uprights and also to the rear left upright. Simply line up the magnets. This is considered single-user mode.



Press the button on the wand to turn the motor on and release the button to turn the motor off.

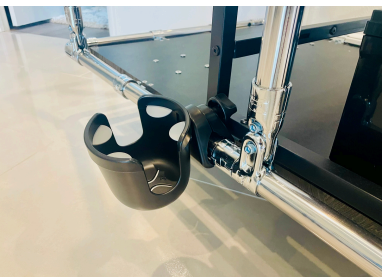

Attach the drip cup holder to the cart. Placement should allow the mixing tube to hang directly above the drip cup.

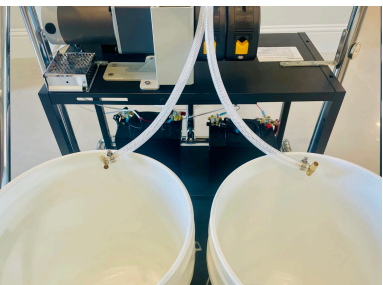

Next, you will drop the short ends of the tubing (tee fitting ends) into the buckets. Drop one in each bucket.

# ENDURABLE DELTA 6000

## INSTRUCTIONS



\*MAKE SURE THE POWER IS OFF  
Put the soft tubing into the pump.  
CAUTION: It's very dangerous if you catch your fingers in the pump.



Component viscosities vary with different materials and these dials allow for adjustment if one component flows faster than the other.



There are two hooks on the top platform which may be used to hold the excess tubing.



Place the valve into the valve holder. The valve holder is adjustable.




If using in single-user mode, keep the valve mixing tube off the floor to allow movement across the floor without the tube touching the floor.


# ENDURABLE DELTA 6000

## INSTRUCTIONS

PG. 4

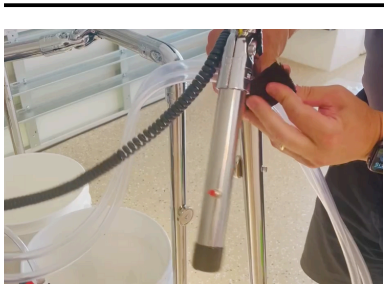


Once the valve is in place, use the Wrap-it strap to attach the tubing to the wand.

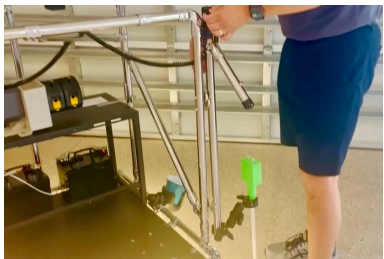

The wand may also be attached to the rear left upright, which allows the tube to drip into the drip cup when you are moving the cart.



Before turning on the pump, put on safety glasses. The tubing is under pressure when the pump is on.

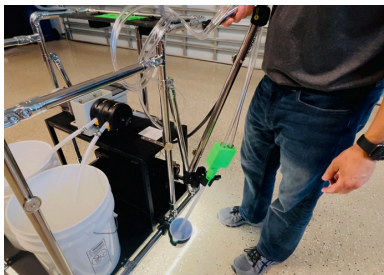

When you are ready to begin, turn on the pump and draw the material out of the buckets until the material is flowing through the valve with no air bubbles. It's good to pump into a waste bucket.




Once you begin, DO NOT STOP for more than 30 seconds or the valve tip will congeal and you will have to replace the valve.




# ENDURABLE DELTA 6000

## INSTRUCTIONS

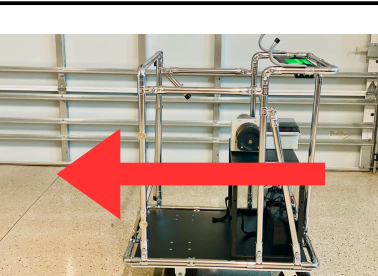


The cart must move this direction whether being pushed or pulled due to the swivel wheels.

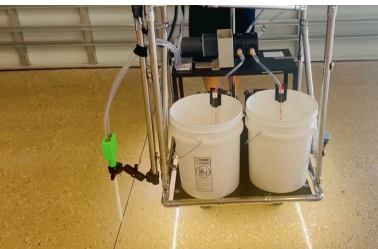

Using the cart in single-user mode: One individual can use this cart by attaching the wand to the cart and putting the valve high enough so the mixing tube is not touching the ground.



Additionally, in single-user mode, one individual can use the cart while holding the wand and pulling the machine backwards. In dual-user mode, this is how the cart is used but a second individual would be pushing the cart.

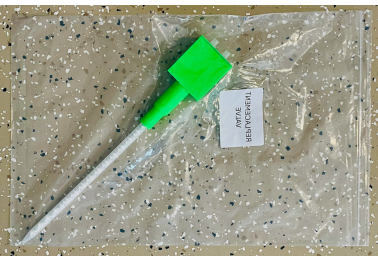

Note: If the valve needs to be replaced during the job, replacement valves without the entire assembly are available for purchase.



When the job is done, simply throw away the hose/valve assembly. There are no hoppers or pumps that require cleaning. Purchase a new kit for the next project.